

William Kenyon®

kenbraid Easi-Splice® braid splicing instructions

The ropes are in different colors for illustration purposes only.

Step 1

Ready to splice – carrier rope ends, Kenbest® Fid, William Kenyon® safety knife, tape, and marker.




Step 2

Mark both ends at approximately 18" (46cm) and 40" (91cm) from end.



Step 3

Push the basket back, insert one end of the rope, and release (to ensure a tight grip on the rope, compress the basket with your fingers). Insert the point of the fid at the 18" (46cm) mark on the opposite end.

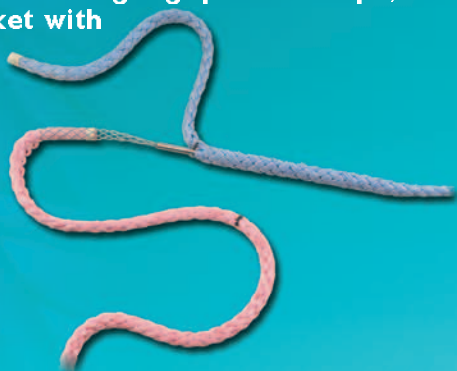

Step 4

Push the fid through the rope and bring it out at the 40" (91cm) mark.



Step 5

To make a proper taper, pull the end through and mark at approximately 12" (38cm) and 7" (18cm). Insert your William Kenyon® "lock back" safety knife at the 12" (38cm) mark and lift slightly one set of ends. Cut and remove. Repeat at the 7" (18cm) mark.



Step 6

The tapered end. Work back into the center of the rope completely.



Step 7 Repeat steps 2-6 for opposite end.

The completed splice.



Your Single Source for Paper Machine Threading®